

How to vacuum your pool



- Connect the telescoping pole to the vacuum



- Take the vacuum hose.

Please note: one end of the hose holds the swiveling cuff and the opposite end holds the vacuum head.

Install the swiveling cuff on the vacuum and place it at the bottom of the pool.



- You must now purge the air out of the hose. To do so, fill up the vacuum hose by holding it in front of a jet.



- Remove the basket from the skimmer and turn the red pointer of the main drain valve vertically. This will close the main drain and suction will be drawn solely from the skimmer.

Reinsert the basket back into the skimmer.



- Connect the vacuum head (the one you just filled with water) to the vacuum plate (Skim-Vac) and **place it over the basket** in the skimmer box.

As a result, the larger debris accumulate in the basket and the smaller ones are directed towards your filter.



For a more effective cleaning, pass the vacuum slowly so as not to move the debris around in your pool.

If suction drops, verify the skimmer's basket.

Depending on the type of cleaning desired, you can set the vacuum to two different modes:

- **REGULAR CLEANING:** Set to the **FILTRATION/FILTER** setting.

The debris is collected in the filter and can be evacuated by doing a **BACKWASH** and **RINSE**.

- **DEBRIS OVERLOAD:** Set to the **ÉGOÛT/WASTE** setting.

Dirt and debris are evacuated directly onto the street via your backwash hose without passing through the filter.

IMPORTANT NOTE: In this mode, the water level in your pool will ascend quickly. It is necessary to check the water level in your draining well before proceeding in this mode. Keep in mind that the water level in the draining well must always be lower than the water level in your pool.

The WASTE setting is highly recommended for the first pool cleaning in the springtime and after yard work such as landscaping.

